

My **surge-protected** extension lead has failed both the insulation and polarity test!

Result

1. Pass Earth Rpe
2. Fail Insulation Riso
3. Fail Polarity

Re-test using a Class I appliance:  
one that has passed its PAT test.

1. Connect the earth test lead to the external earth point of the appliance.
2. Insert the plug of the appliance into the first socket of the extension lead.
3. Insert the plug of the extension lead into the socket of the PB500.
4. Press the Class I button.
5. Repeat the test for all sockets of the extension lead..

A **Pass** result will be

1. Pass Earth Rpe
2. Fail Insulation Riso
3. Pass Leakage Ileak

Any other result is a  
**FAIL!**