

PROGRAMMING THE DOOR UNIT

The following section explains how to programme the door number and house code. The Reset button for coding is on the front face of unit. Please familiarise yourself with this procedure before commencing.

Entering programming mode

1. Press and hold the **reset** until 2 beeps (Keep reset held)
2. Press **call** button twice
3. Release the **reset** button, 1 beep is heard

Setting the house code (If you do not know your house code, call us for the information, 01202 573300):

4. Press the **call** button once, 1 beep is heard.
5. Press **reset** the amount of times required for the house code number
E.g. For house code 6, press reset six times
6. Press **call** to store, 2 beeps are heard

Coding the door number

7. Press **reset** for number of 100s
E.g. Press reset twice for 200
8. Press **call** to store
9. Press **reset** for number of 10s
E.g. Press reset four times for 40
10. Press **call** to store
11. Press **reset** for number of units (1-9)
E.g. Press reset five times for 5
12. Press **call** to store, one beep will be heard (Red LED light will be lit)

Setting the door to emergency, assistance or call

13. Press **reset** 0 times for emergency, 1 time for assistance or 2 times for call
14. Press **call** to store, one beep is heard (Red LED light will be lit)
15. Press **reset** once. The LED will go out

