

PROGRAMMING 433 PENDANTS LOCATION NUMBER AND HOUSE CODE

The following section explains how to programme the pendant number and house code. Please familiarise yourself with this procedure before commencing.

Before you do this, you need to know your 'house code' number. Press the yellow button on the back of the display panel once to find your house code (E.g. Hc 2).

Note: You must complete all steps from 1 to 15. You can not just change the Pendant Number alone.

Entering programming mode

1. Press and hold the **reset** until 2 beeps are heard (Keep reset held)
2. Press **call** button twice.
3. Release the **reset** button.

Setting the house code

4. Press the **call** button once.
5. Press the **reset** button the amount of times required for your House code.
6. Press **call** to store.

Coding the pendant number

7. Press **reset** for number of 100s (E.g. Press reset twice for 200)
8. Press **call** to store.
9. Press **reset** for number of 10s (E.g. Press reset four times for 40)
10. Press **call** to store.
11. Press **reset** for number of units (1-9) (E.g. Press reset five times for 5)
12. Press **call** to store, (Red LED light will be lit)

Setting the pendant to emergency, assistance or call

13. Press **reset** 0 times for emergency, 1 time for assistance or 2 times for call
14. Press **call** to store, (Red LED light will be lit)
15. Press **reset** once. The LED will go out.