


COREdeck

Install Guide

STEP 1

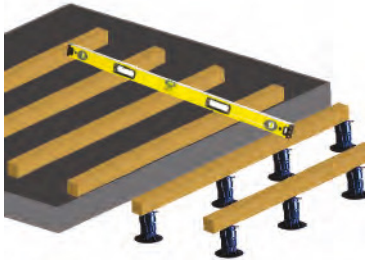


Ensure the sub frame is level whether using adjustable feet or laying directly onto a concrete base.

STEP 2




Always pre-drill WPC products to approximately 75% to reduce the risk of damaging the product when fixing.

STEP 3

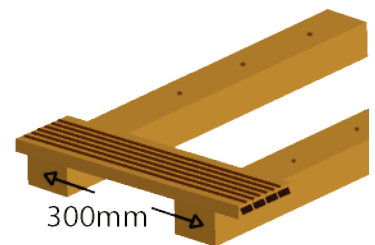


Make sure the joists are no more than 300mm apart from centre to centre, or 250mm if using a 45° laying pattern.

STEP 4

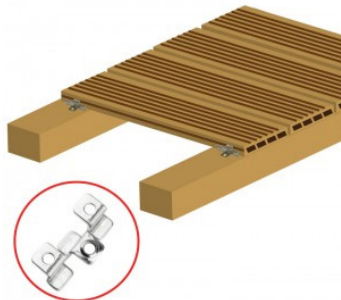

Make sure a stainless steel concealed fixing clip is used on every joist. Meaning there will be at least 1 fixing clip every 300mm along the board.

STEP 5

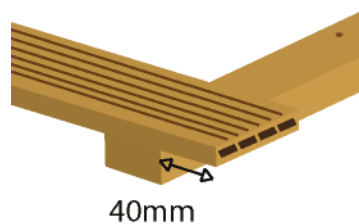


Make sure the boards do not over hang the joist more than 40mm.

STEP 5



Always cut the board face up with a fine toothed blade to prevent furring the face edge of the board.

STEP 7

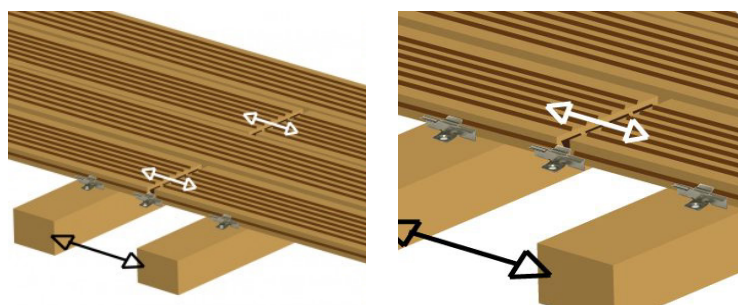

Always leave a small expansion gap between two boards and adjoining surfaces to prevent creating pressure. Each adjoining board can be supported by its own joist Or you can aim to have the boards meeting in the middle of a joist, either way, a concealed fixing clip should be installed where the two boards meet to assist in keeping the boards flush with one another.

Certifications



Forest Stewardship Council



European Conformity



International Organisation
for Standardisation



Leaders in inspection
testing & certification



Business Social Compliance
Initiative