Installation instructions for Tanking Sleeve / Matt / Gauze into Mcalpine TSG50BB Shower Trap

1

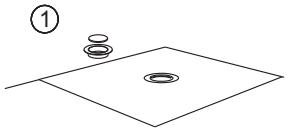

Remove the cover and clamping ring from the trap.

2



Apply compound to the hatched area. About 300mm x 300mm

3



Position the tanking mat centrally over the outlet, press down into position and let dry.

4



Push the clamping ring down into position. Secure the clamping ring in position using the 4 screws provided.
Cut any excess matting from the inside of the clamping ring with a sharp knife.

5

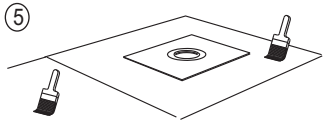

Tank the whole area including the tray, as per the manufacturer's instructions.

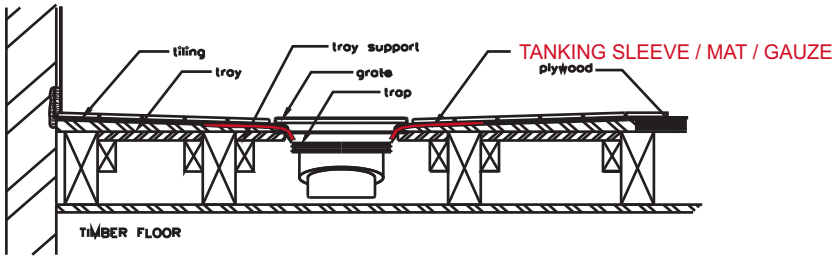

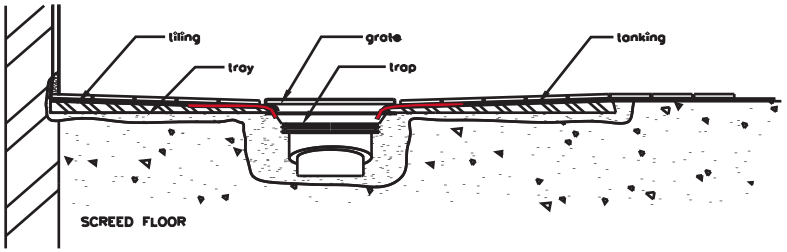

For more information download our Tanking Brochure or see our video on Wet room Installation

PROJECT Tanking Mat Installation	DRAWING N/A	DATE	Not to Scale

on the level

On The Level Unit 8 Youngs Industrial Estate. Stanbridge Road. Leighton Buzzard. Bedfordshire. LU 7 4QB
TEL : 01525 373202 FAX : 01525 373222
www.onthelevel.co.uk. Email: sales@onthelevel.co.uk