


Does your lock have a memory?



Or a radio network?

Superior-System

Programmable handles with wireless access point

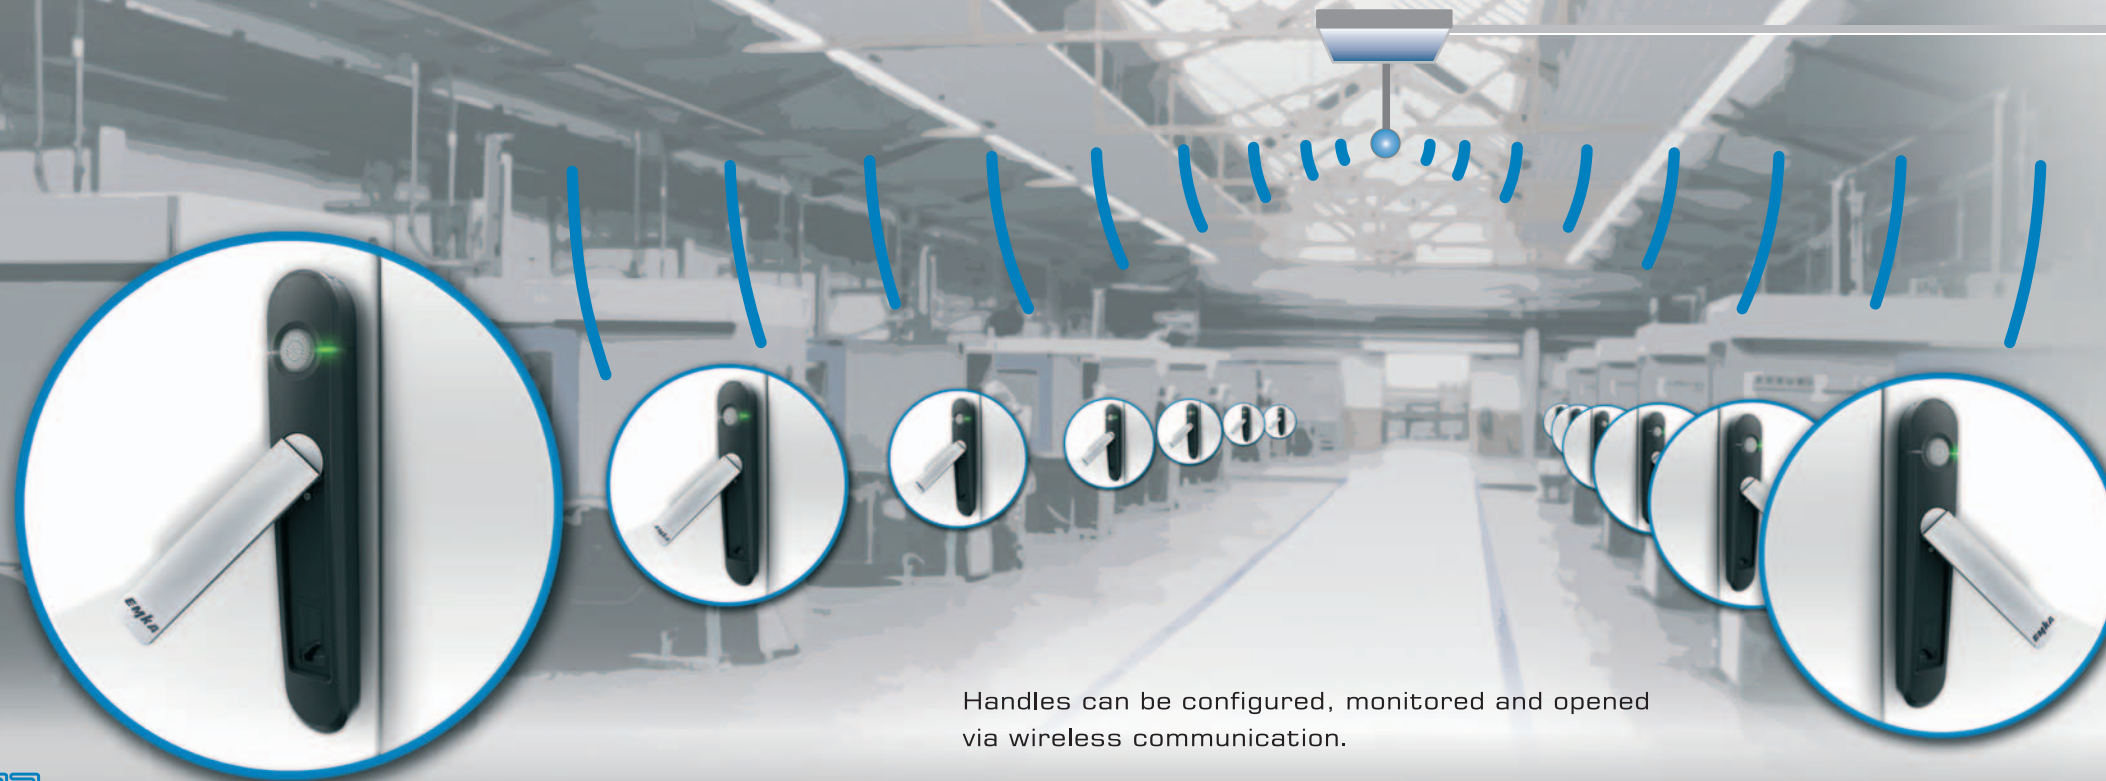

Due to its flexibility the system can react quickly in case of a lost micro transmitter or organisational changes.

Individual access authorisations are also easily programmable. Upon request the last 5000 accesses can be called up (journal function).



Handles can be configured, monitored and opened via wireless communication.

***Electronic locking is not new.
Ours is.***

- lock and handle in one module
- subsequent securing of doors is possible
- unlockable via personalised transmitter (TAG's)
 - offering individual configurations
 - journal functions



Agent E can be installed as a complete handle module to replace a handle or quarter turn. It takes over the functionality of both locks and handles.

By use of the micro-transmitter (TAG) an encoded light beam is directed to a receiver cell inside the handle module. The release is actioned after a successful verification. The door can now be opened by use of the released handle.



Components

- handle module
- micro transmitter
- configuration software
- USB cable



The Agent E handle module is connected via USB cable to a computer.

An intuitive software identifies immediately the connected module. Now you can access the memory or the master key plan can be recorded.

Profi-System

Programmable handles with transmission via USB interface



Components

handle

- radio frequency 868 MHz
- coverage: min. radius 20m
- power supply: 2 AAA-batteries
- radio transmission: encoded 128bit AES

micro transmitter (TAG)


- illuminating diode: encoded light beams
- coverage: max. 0,1m
- lithium battery 1/2AA, 3,6V/1Ah

Basic-System

Identification sender (TAG) with handle



TAG with push button

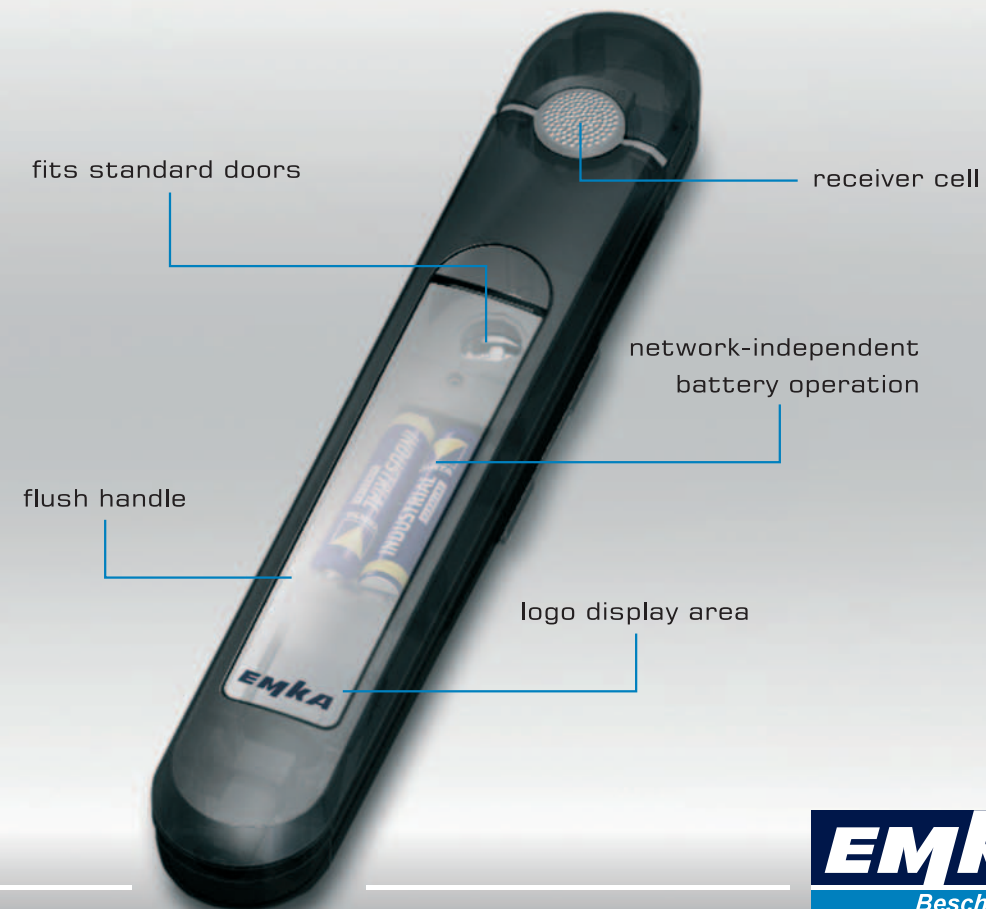



AGENT E

Basic-System

- easy programming of the transmitter (TAG) directly at the corresponding handle
- no software required

Profi-System (additional properties vs. Basic System)

- configurable via master key plan software
- configuration is transmitted via USB-interface with the handle
- quick solution in case of lost TAG's or organisational changes.
- individual access authorisations are also easily programmable (e.g. Mo. - Fr., 07:00h - 17:00h)
- journal functionality of the last 2000 access (who, when, which lock)

Superior-System (additional properties vs. Profi-System)

- configuration is transmitted via radio network by using access-points to several modules
- remote opening and monitoring

Subject to technical improvement changes. © EMKA 11/2009